

## Aeron® PostureFit® Installation

1. Remove Wishbone back support from chair by pulling up.



2. Locate clip and cable under chair. Cable is attached to triangle dial on right hand side of chair.

Turn triangle dial backward to expose wire.



3. Open up a hole in the pellicle (mesh) with a Pen. Line the pen up with the screw hole in frame (as shown). (Don't worry this won't void your warranty or rip the fabric.)



4. Push the pen through the pellicle (mesh) and immediately, push cable\* through opening from front to back

\*Do not kink/bend the cable



5. Line up screw holes and attach clip to frame of chair as shown.

Apply hand pressure to snap clip into place.



6. Put Wishbone back onto tracks on chair's back frame and push down into place.




7. Apply pressure to the lower half of the wishbone support to get closer to the cable.

Slip cable through top key slot and down to secure the cable.




8. Insert long screw into clip.



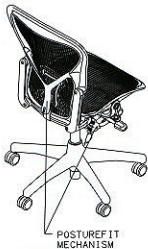

## PARTS INCLUDED

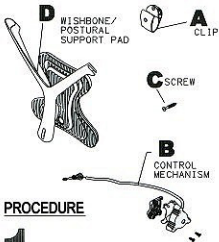

## TOOLS NEEDED



#2 PHILLIPS HEAD  
SCREWDRIVER



T-15 TORX HEAD  
SCREWDRIVER



2.5 MM HEX HEAD  
SCREWDRIVER




AWL



OPTIONAL TOOL AVAILABLE:  
CABLE INSERTION TOOL  
"UAE01D"

## PROCEDURE

1

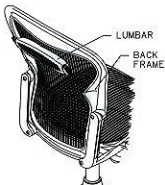

1. If chair is equipped with lumbar, slide off from back frame and dispose of properly.